




MANUFACTURER OF AMUSEMENT MACHINES

JAKAR, 44 – 240 Żory, ul. Fabryczna 10, Poland
tel./fax. +48 32 435 79 22, www.jakar.pl
e-mail: sales@jakar.pl, service@jakar.pl

ICE HOCKEY



I. SCHEME – PCB BOARD

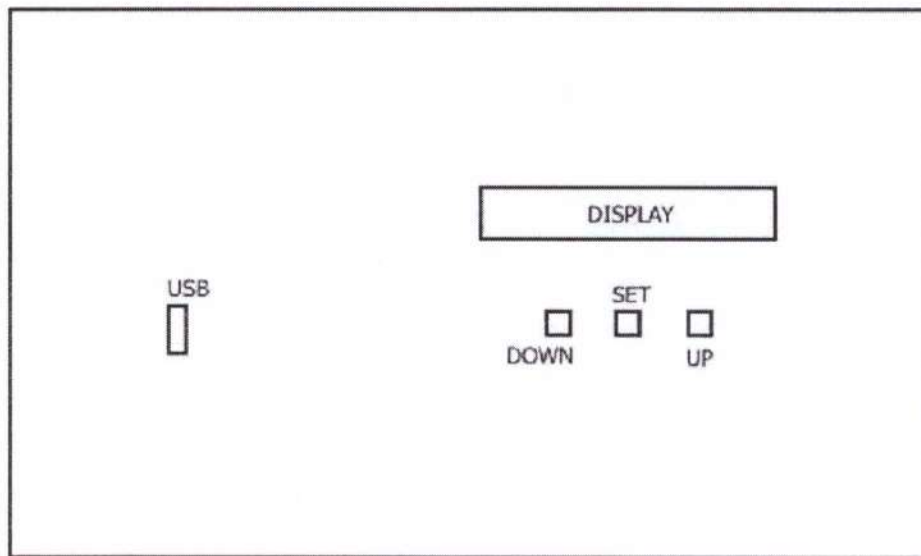

II. PRIMARY SETUP

To enter SETUP there have to be 0 credits on the machine.
Press SET button to choose function.

1. Volume Demo (- / +)
2. Volume Voice (- / +)
3. Volume Music (- / +)
4. Volume Alarm (not active)
5. Volume Win (not active)
6. Bass MP3 (- / +)
7. Treble MP3 (- / +)
8. IN 1 - not possible to cancel – quantity of credits from the beginning
9. IN 2 - possible to cancel (by pressing buttons DOWN / UP) - quantity of credits after last cancellation
10. In Counter Games Test – testing games counter
11. Number of service credits (switch)

12. CREDIT SETTINGS:

For Coins (example in €)

Coin CH1 > 1

Credit – 1

For 1 euro coin you have 1 credit

Use buttons DOWN / UP to change value of coin and credits quantity

Use button SET to move between COIN CHN1 and Credits

The arrow means which position you can change at the moment

The same on Coin CH2, Coin CH3, Coin CH4

13. BANKNOTE ACCEPTORE SETTINGS (The same procedure like with coins)

BANK CH1, BANK CH2, BANK CH3, BANK CH4

14. Free Play (ON / OFF)

15. Ticket Dispenser

PARAMETRY TECHNICZNE / TECHNICAL PARAMETERS

<i>Wysokość / Height:</i>	<i>85 cm</i>
<i>Szerokość / Width:</i>	<i>126 cm</i>
<i>Długość / Length:</i>	<i>218 cm</i>
<i>Waga / Weight:</i>	<i>220 kg</i>
<i>Zasilanie / Power supply:</i>	<i>220 – 240 V</i>
<i>Pobór mocy / Power consumption</i>	<i>100</i>

!!! ATTENTION !!!

All metal parts are connected together and the machine must be plugged into the socket with ground terminal AC 230 V 50 Hz. Only this connection makes the game safe and the machine will work properly.



CARE AND MAINTENANCE

- Turn the adjustable leg bolts to create a leveled playing field.
- Do not shake or drop when transporting.
- Check air holes periodically to ensure smooth airhockey play.
- Do not use sharp objects on playfield.
- Keep table surface always clean and dust free.
- When cleaning table surface use a soft dry cloth and polishing spray.
- DO NOT APPLY AMONIA BASED PRODUCTS such as window/glass cleaner.
- Polish Spray/Wax is provided inside the mallet kit. Contact JAKAR for more if needed.
- Polish Spray/Wax table monthly to ensure best playfield.

III. HARDWARE SETUP

To enter SETUP there have to be 0 credits on the machine.
Press simultaneously buttons DOWN and UP to enter the SETUP.

MENU	FACTORY SETTINGS	SETTINGS RANGE
GAME TIME	240 seconds	30 – 1200 seconds
MAX GOALS	50	1 – 50
EXTRA TIME (AFTER DRAW)	120 seconds	0 – 240 seconds (0 sec = off)
SUPER PUCK (EXTRA PUCK)	60 seconds	40 – 240 seconds (0 sec = off)
SUPER GAME (LUCKY DRAW)	120 seconds	0 – 240 seconds (0 sec = off)
SPEED MOTOR (SUPERCHARGER)	65 %	0 – 99%
COMMENTARY AFTER GOAL	After 3 goals	0 -10 goals
TIME PRESENTATION	After 5 minutes	0 – 60 minutes
BLOWER - COOLING	After 5 minutes	0 – 60 minutes
RESET FACTORY	-	Reset all to factory settings